



INSTALLATION, SERVICE AND MAINTENANCE INSTRUCTIONS



***Electric linear thrust actuator
ST Mini***

TEST CERTIFICATE

ELECTRIC LINEAR THRUST ACTUATOR ST Mini	
Type number 472.....	Power supply V Hz
Serial number	Max. load thrust N
Production year	Switching-off thrust N
Wiring diagram	Operating speed mm/min
.....	Stroke mm
Warranty period months	Transmitter
Serial number of electric motor	
Serial number of transmitter	
Tests made in accordance with 74 1002 00	
Tests made by	
Date	Signature and stamp

COMPLETENESS CERTIFICATE

Used valve	
Assembled by: Firm	
Name.....	
Warranty period months	
Date	Signature and stamp.....

INSTALLATION CERTIFICATE

Location	
Installed by: Firm	
Name	
Warranty period..... months	
Date	Signature and stamp.....

Please read these instructions carefully before mounting and operating the actuator!

Contents

1. General data	2
1.1 Purpose and applications	2
1.2 Safety instructions	2
1.3 Warranty conditions	3
1.4 Under-guarantee and after-guarantee service	3
1.5 Operation conditions	3
1.6 Description	5
1.7 Basic specifications	7
1.8 Packing, transport, storing and unpacking	9
1.9 Appreciation of the product and packing	9
2. Installation and dismantling of actuator	9
2.1 Installation	10
2.2 Dismantling	12
3. Adjusting of actuator	13
3.1 Gear unit adjustment	13
3.2 Position unit adjustment (Fig. 5)	13
3.3 Adjustment of resistant transmitter	14
3.4 Adjustment of the Electronic Position Transmitter (EPV) - the Resistive Transmitter (Potentiometer) with the Converter PTK 1	14
4. Service, maintenance and troubleshooting	16
4.1 Service	16
4.2 Maintenance - extent and periodicity	17
5. Spare parts	17
6. Enclosures	18
6.1 Wiring diagrams	18
6.2 Dimensional drawings	19
6.3 Record on warranty service intervention	23
6.3 Record on after-warranty service intervention	24
6.4 Commercial agency and contractual service centers	25